


Prinzipzeichnung RR3000 XXL

General Drawing RR3000 XXL

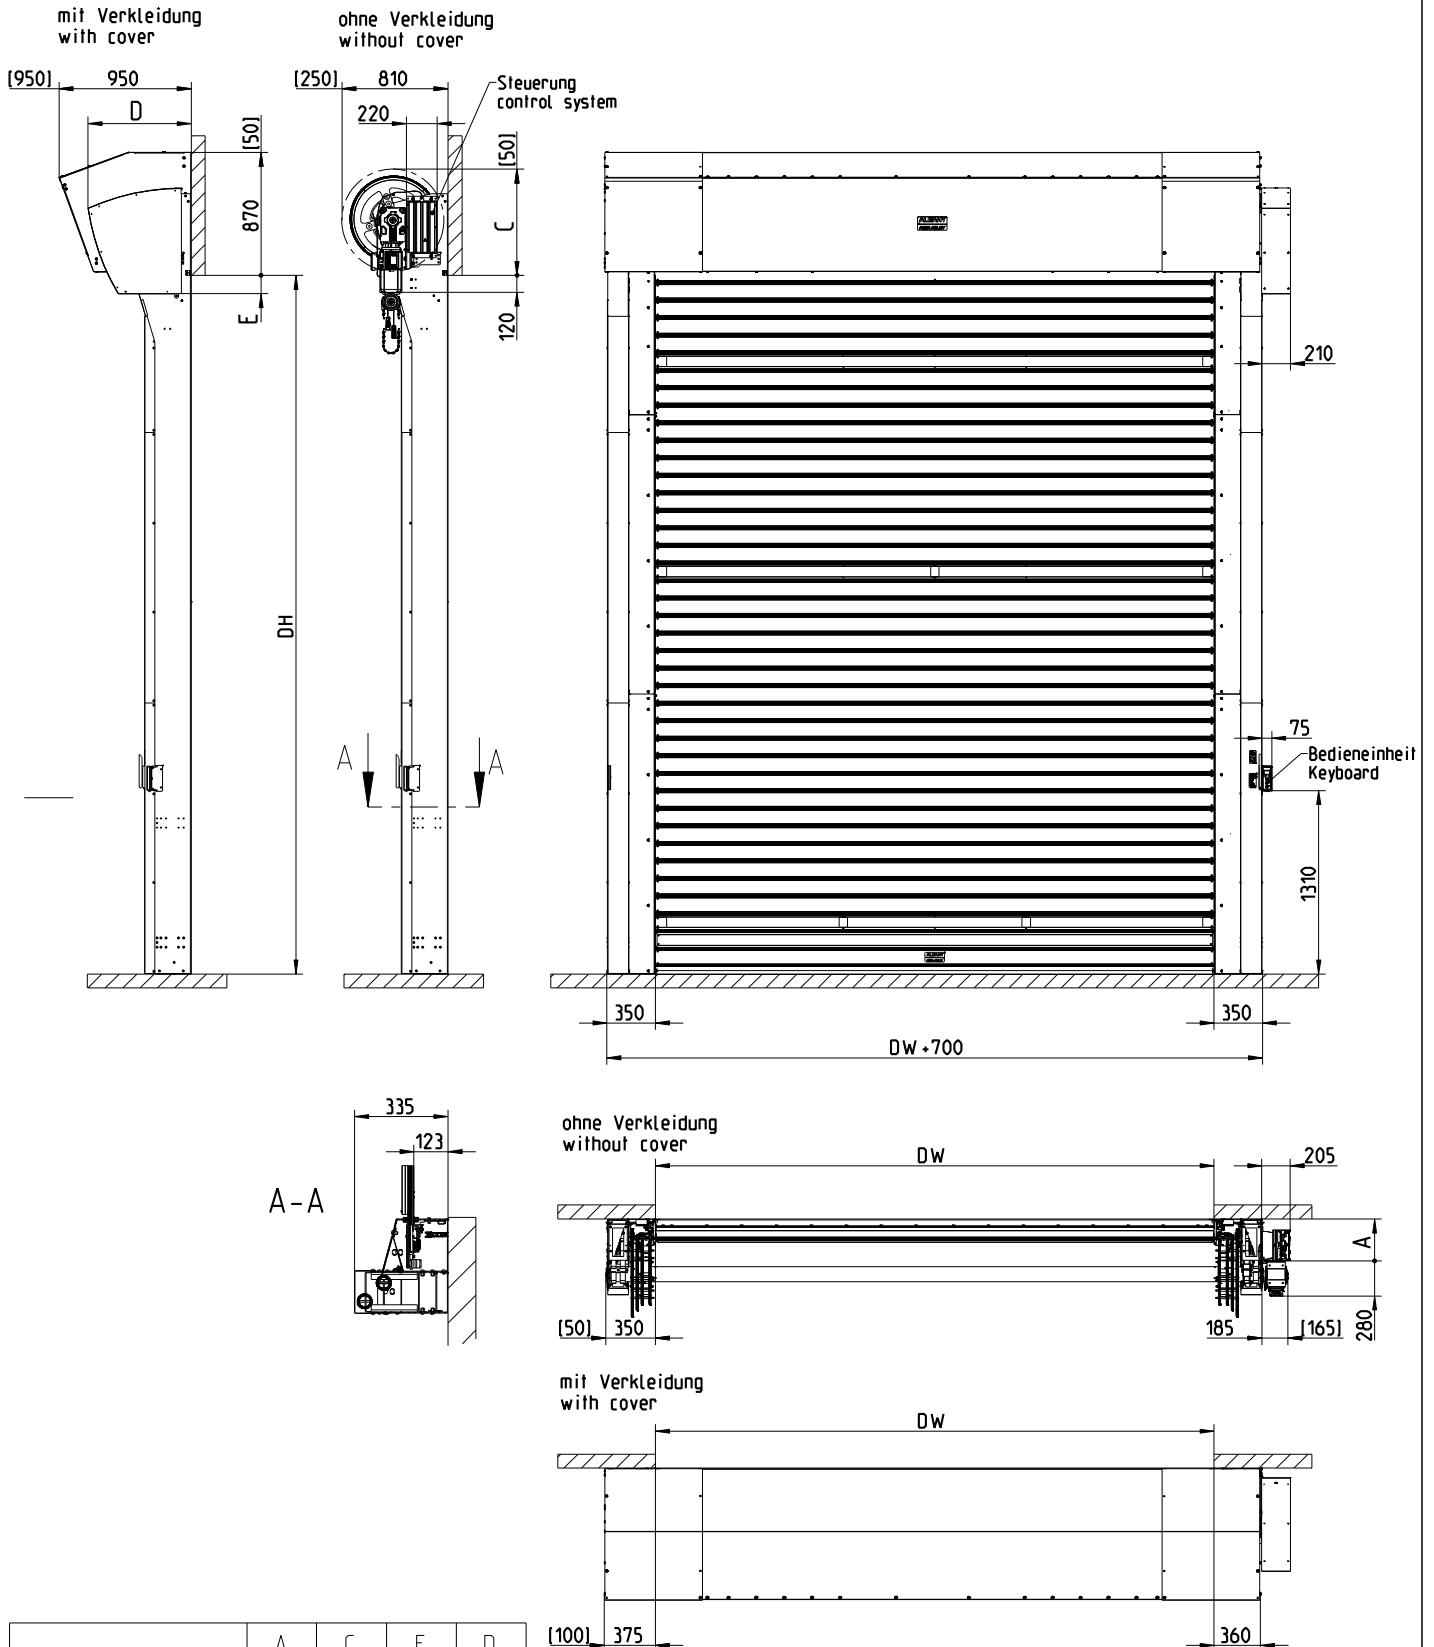

	A	C	E	D
RR3000 XXL (DH > 5000)	300	850	100	775
RR3000 XXL (DH ≤ 5000)	270	740	135	740

[] = Montagefreiraum
Space needed for installation