


User Manual

Revolving Doors

ASSA ABLOY RD300-3, RD300-4 (CDC 4)

ASSA ABLOY
Entrance Systems

Experience a safer
and more open world

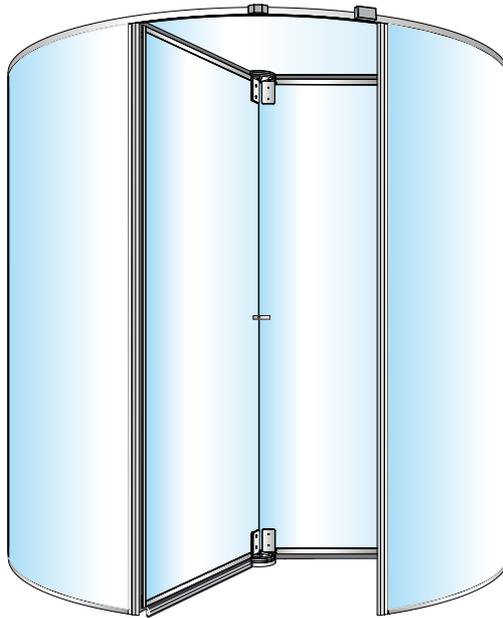

CONTENTS - Original instructions

| | |
|---|----|
| Instructions for safe operation | 4 |
| Congratulations on your new automatic door! | 5 |
| Electronic equipment reception interference | 5 |
| Environmental requirements | 5 |
| Product liability | 5 |
| Warranty | 6 |
| Service | 6 |
| Intended use | 7 |
| Technical specification | 7 |
| How the ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 work | 7 |
| Main parts | 8 |
| Settings and operation PCD | 9 |
| General information PCD | 9 |
| Information prompts on PCD display | 9 |
| Access code | 10 |
| Changing operating mode | 11 |
| Real time operation | 13 |
| Safety | 16 |
| Safety device on the door | 16 |
| Pressure sensitive safety edges | 17 |
| Force sensitive door leaves | 17 |
| Emergency stop button (inside) | 17 |
| Regular safety checks | 18 |
| Troubleshooting | 21 |
| Supervision system | 22 |
| Code List | 22 |
| Service/Maintenance | 23 |
| Service request | 23 |
| Options | 24 |
| Pressure sensitive safety edges placed on the door leaves | 24 |
| Infrared presence sensing system | 24 |
| Laser presence sensing system | 25 |
| Vertical presence photocell sensor PDR | 25 |
| Concealed sensor box | 26 |
| Emergency stop button (outside) | 26 |
| Push button for disabled | 26 |

| | |
|---|----|
| Control post | 27 |
| Mechanical lock | 28 |
| Center plate | 28 |
| Rain water protection cover opening | 29 |
| Accessories | 30 |
| Rotation brake (lock) | 30 |
| Electromechanical lock | 30 |
| Night closing door (NCD) | 31 |
| Quick guide changing operating mode | 32 |
| Other products from ASSA ABLOY Entrance Systems | 33 |
| Declaration of conformity | 34 |

ASSA ABLOY as word and logo are trademarks owned by the ASSA ABLOY Group

© ASSA ABLOY Entrance Systems, 2020

Technical data subject to change without notice.

Backtrack information: folder:Workspace Main, version:a620, Date:2020-10-09 time:06:38:32, state: Frozen

Instructions for safe operation



- Failure to observe the information in this manual may result in personal injury or damage to equipment.
- To reduce the risk of injury of persons - use this door set only as a pedestrian door.
- Do not use the equipment if repair or adjustment is necessary.
- Disconnect supply when cleaning or other maintenance is to be carried out.
- The operator can be used by children over 8 years of age if they have been instructed by a person in charge of their safety.
- The operator can be used by children 8 years of age or younger if they are supervised by a person responsible for their safety.
- The operator can be used by persons with impaired physical, sensory or mental capacity if they have been instructed by a person in charge of their safety.
- Cleaning and user maintenance shall not be made by children.
- Do not let anyone climb on or play with the door or the fixed/remote controls.
- The doorset can be operated automatically by sensors or manually by activators.

Congratulations on your new automatic door!

ASSA ABLOY Entrance Systems AB has developed automatic doors for more than 50 years. State-of-the-art technology and carefully tested materials and components provide you with a superior product.

As with all other technical products, your automatic door requires periodic maintenance and service. It is essential that you know your automatic door (system) and that you recognize the importance of maintaining it in compliance with applicable standards for safety.

Your local ASSA ABLOY Entrance Systems-authorized representative is familiar with these standards, as well as all applicable local codes and ASSA ABLOY Entrance Systems recommendations for power-operated pedestrian doors. Service and adjustments performed by your ASSA ABLOY Entrance Systems-authorized representative, will ensure safe and proper operation of your automatic door unit.

Electronic equipment reception interference

The equipment may generate and use radio frequency energy and if not installed and used properly, it may cause interference to radio, television reception or other radio frequency type systems.

If other equipment does not fully comply with immunity requirements, interference may occur.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Relocate the receiver with respect to the equipment.
- Move the receiver away from the equipment.
- Plug the receiver into a different outlet so that equipment and receiver are on different branch circuits.
- Check that protective earth (PE) is connected.

If necessary, the user should consult the dealer or an experienced electronics technician for additional suggestions.

Environmental requirements

ASSA ABLOY Entrance Systems products are equipped with electronics and may also be equipped with batteries containing materials which are hazardous to the environment. Disconnect power before removing electronics and battery and make sure it is disposed of properly according to local regulations (how and where) as was done with the packaging material.

Product liability

According to regulations, the following are the responsibility of the owner or caretaker of the equipment

- that the equipment operates correctly, so that it gives sufficient protection in regard to safety and health
- that the equipment is operated and regularly maintained, inspected and serviced by someone with documented competence in the equipment and in applicable regulations
- that the provided "Service Log Book" and "Site Acceptance Test and Risk Assessment" documents (PRA-0003) are kept available for maintenance and service records
- that inspection covers the emergency opening function (when applicable)
- that the closing force is appropriate for the door size on fire-approved door systems (when applicable).

Warranty

ASSA ABLOY Entrance Systems warrants its products to be free from defects in material and workmanship under intended use and service for a warranty time of 12 months, beginning at time of delivery. This warranty extends only to the original buyer of the equipment.

ASSA ABLOY Entrance Systems warrants that the software will operate substantially in accordance with its functional descriptions and that it has been recorded on non-defective media.

The ASSA ABLOY Entrance Systems warranty does not apply to

- That the software will be error-free or operate without interruption
- General wear and tear on the system
- Fuse, disposable batteries and glass damage
- System deviations caused by installer other than ASSA ABLOY Entrance Systems
- System that has been altered or damaged by vandalism or misuse
- System that has been additionally equipped with non-ASSA ABLOY Entrance Systems original branded parts and/or spare parts
- Unrequired visits due to poor client communication (door working when our technician arrives, reset, power discontinuation)
- Adjustments (closing and opening speed and also detection field radars) due to customer requests (excludes operational adjustments thought to create a hazard)
- Water damage
- Adverse weather conditions
- Any damage caused, directly or indirectly, by a circumstance beyond the control of the applicable company within ASSA ABLOY Entrance Systems, such as industrial dispute, fire, natural disaster, war, extensive military mobilization, insurrection, requisition, seizure, embargo, restrictions in the use of power and defects or delays in deliveries by sub-contractors caused by any such circumstances

Please note:

- Non-compliance with manufacturers care and maintenance recommendations may void the warranty.
- ASSA ABLOY Entrance Systems-authorized resellers shall extend this warranty to end-users only, but have no authority to extend a greater or different warranty on behalf of ASSA ABLOY Entrance Systems.
- A service agreement with ASSA ABLOY Entrance Systems will help secure the availability of a fully operational system and will give priority at call-out, thus minimizing the time that the equipment is unusable.

Service

Inspections should be done regularly by a trained and qualified person. The frequency of these inspections should be according to national regulations (or according to industry standard if there are no national regulations). This is especially important when the installation concerns a fire-approved door or a door with an emergency-opening function. To extend the life of your investment and ensure safe and reliable operation of the door, we recommend a minimum of 2 visits per year or more, depending on usage and operating conditions. Environmental aspects shall also be considered.

As your entrances are part of your business flow, there's every reason to keep them working well. ASSA ABLOY Entrance Systems offers you a maintenance and modernization expertise to rely on. Our Maintenance Programs and Modernization Services for entrance automation is backed by a extensive expertise for all types of pedestrian- and industrial door and docking systems, independent of brand. At your disposal is a team of dedicated expert technicians, proven through decades of maintenance, service and satisfied customers.

Intended use

The ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 are automatic revolving doors developed to provide draught free access to buildings.

The door is designed to offer continuous use, a high degree of safety and maximum lifetime. The system is self-adjusting to the effects caused by normal variations in the weather conditions and to minor friction changes caused by e.g. dust and dirt.

This door is not intended for escape routes unless approved by local authority having jurisdiction.

The door can be used indoors or outdoors. Outdoor use with water resistant cover.

For installation and maintenance see Installation and Service manual 1013305.

Save these instructions for future reference.

Technical specification


| | |
|--|--|
| Manufacturer: | ASSA ABLOY Entrance Systems AB |
| Address: | Lodjurgatan 10, SE-261 44 Landskrona, Sweden |
| Type: | ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 |
| Mains power supply: | 230V, 50/60Hz, mains fuse max. 10AT or 100-120V, 50/60Hz, mains fuse max. 16AT |
| Power consumption: | Standard drive unit 200W/resting 30W Max. support 400W/resting 30W |
| Temperature range: | -20 to +50°C |
| Degree of protection: | IP20 |
| Degree of protection, drive: | IPX5 |
| Degree of protection, control actuators: | IP54 |
| Sound pressure: | $L_{pa} \leq 70 \text{ dB}(A)$ |
| Approvals: | Third party approvals from established certification organizations valid for safety in use, see Declaration of Conformity. |

How the ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 work

The door is designed so that operation is not affected or interrupted by winds or by users pushing the doors. The unique CDC control system was developed by ASSA ABLOY Entrance Systems specifically for use with its products, and the result is a fully integrated entrance solution with no compromise in design or function. The system ensures lowest operating/maintenance cost, highest safety and best availability.

Automatic revolving door with drive unit fixed in the floor. Glass is the main component of the door with less profiles, which makes it look more attractive.

Main parts

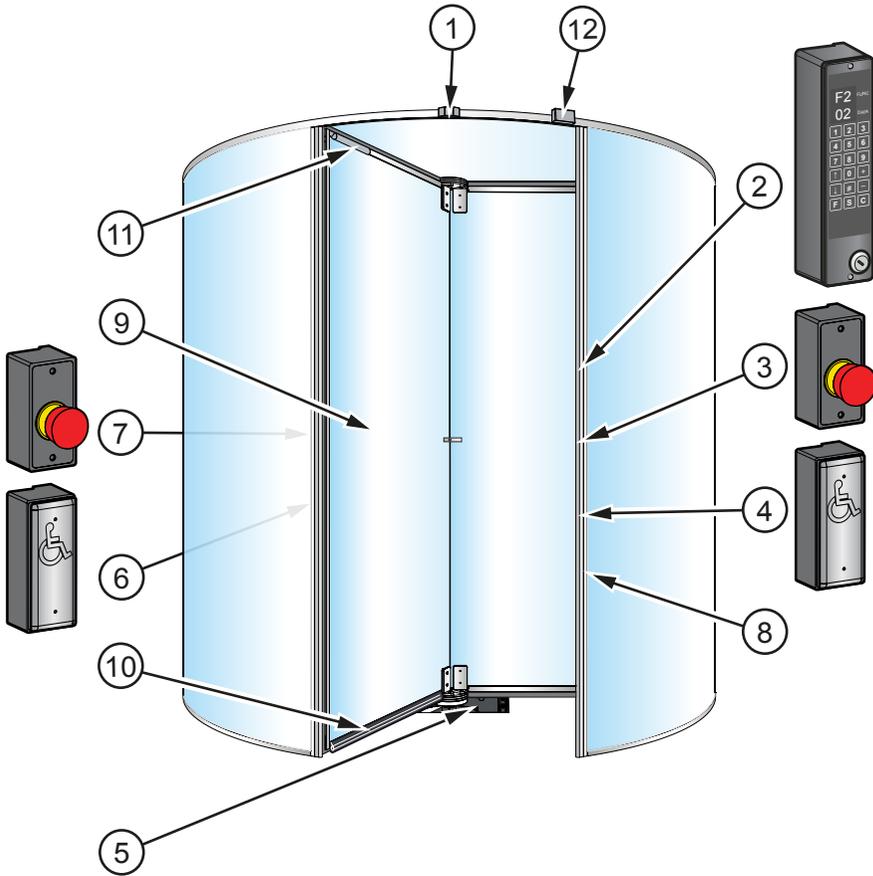


| No. | Description |
|-----|--|
| 1 | Activation units |
| 2 | Program Control Device (PCD) with ON/OFF switch |
| 3 | Emergency stop button (inside) |
| 4 | Push button for disabled (inside) (option) |
| 5 | Main control unit CDC 4 |
| 6 | Push button for disabled (outside) (option) |
| 7 | Emergency stop button (outside) (option) |
| 8 | Pressure sensitive safety edges placed on the drum edges |
| 9 | Force sensitive door leaves |
| 10 | Pressure sensitive safety edges placed on the door leaves (option) |
| 11 | Infrared presence sensing system (option) |
| 12 | Vertical presence photocell sensor PDR (option) |

Settings and operation PCD

The PCD (Program Control Device) is used to select what operating mode is active when the ON/OFF switch is in the ON position. It is also used to check and set door configuration.


General information PCD

| Key | Function |
|--|---|
| 0-9 | Numeric inputs |
| # | Confirm access code input |
| ↑ | Setpoint selection upwards |
| ↓ | Setpoint selection downwards |
| + | Setpoint value change upwards |
| - | Setpoint value change downwards |
| F | Function selection |
| S | Setpoint confirmation and storage |
| C | Error clear (20, 30) Clear display Leave menu |
|  ILL-01914 | ON/OFF switch 1 = ON 0 = OFF |

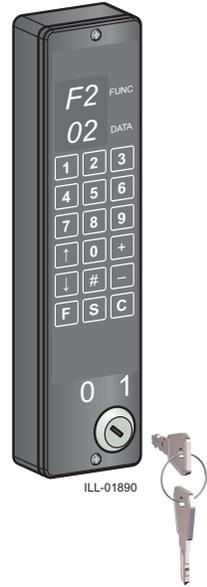

Information prompts on PCD display

| Prompt | Description |
|--------|---|
| P1 | ON/OFF switch in OFF position. |
| P2 | Service request. Call ASSA ABLOY Entrance Systems for service. |
| P3 | Real time operation ON, see " Real time operation " on page 13. |

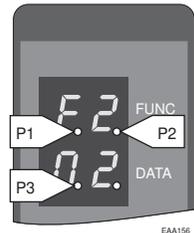

The door configuration must be set by ASSA ABLOY Entrance Systems Service technicians.

Access code

To be able to operate the PCD it is required to login with an access code.

Login on the PCD

- 1 Press # to clear the display.
- 2 Enter the access code 1234. The display shows ==.
- 3 Press # to confirm the input.

If the access code is correct the display shows

LI (Login)

0 1 (Level 01)

In case of four consecutive failed login attempts, five minutes must pass before a new attempt can be made.

Logout from the PCD

- 1 Press # to clear the display.
- 2 Enter the access code. The display shows ==.
- 3 Press # to confirm the input.
If the access code is correct the display shows
LO (Logout)
0 1 (Level 01)
- 4 Automatic logout ten minutes after the last key press.
- 5 Automatic logout can be inhibited by typing **F561** on the PCD.

Change access code

At delivery the access code is 1234. To change, follow the procedure below.


- 1 Type **#1234#**. If the access code is correct the display shows
LI (Login)
0 1 (Level 01)
- 2 Type **F41**. The display shows
F 4
L 1
- 3 Enter new code (4 digits).
- 4 Press **S** to confirm.
- 5 Enter the new access code a second time.
- 6 Press **S** to confirm.

The ON/OFF switch

The ON/OFF switch can be used in any of the operating modes 01-06. In the ON (1) position, the door operates according to selected operating mode.

Setting the switch to OFF (0) is indicated by prompt P1 on the display and is equivalent to selecting the operating mode Locked (OFF) 01 (see page 12).

Key impulse switch

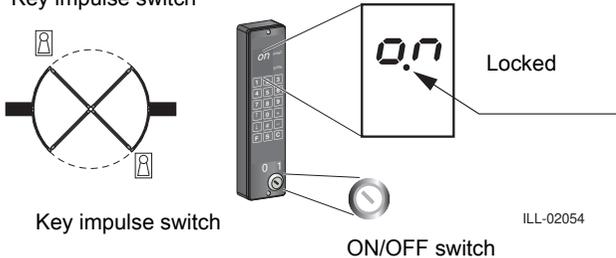

Key impulse switch (option)


If the door is locked with the ON/OFF switch it can be opened with a key switch (ask your local ASSA ABLOY Entrance Systems Service). When the key switch is activated, the door unlocks, runs 360° and locks again.

Changing operating mode

- 1 Login on the PCD.



- 2 Type F2. (The display shows F2 plus current operating mode.)
- 3 Use the up or down arrow to change the operating mode 01-07.
- 4 Confirm the change and exit the operating mode selection function by pressing S.

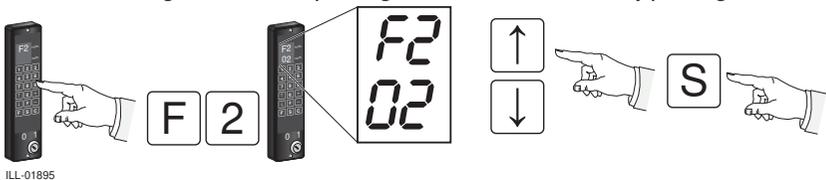


- 5 Logout from the PCD



The different operating modes


Locked (Off) 01

The door rotates to its home position. If an electromechanical lock is fitted, the lock is activated. The door can be opened with the key impulse switch, see [Key impulse switch \(option\)](#) on page 11.

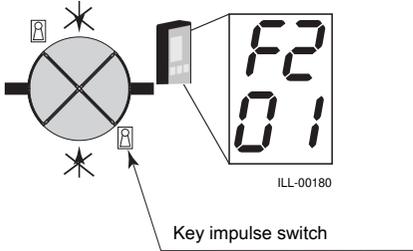


Automatic operation 02

The door is parked in standby position when there is no traffic. As soon as the outside or inside activation units detect approaching traffic, the door starts rotating.

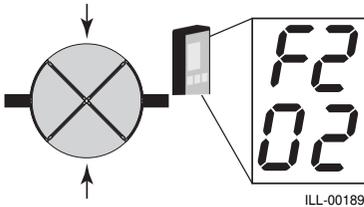

Continuous rotation 06


The door rotates at a low speed. As soon as the outside or inside activation units detect approaching traffic, the door accelerates to normal speed. The door returns to low speed when there is no traffic.

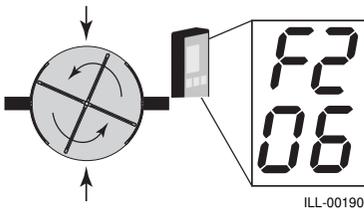

Manual operation "Cleaning position" 07

The door rotates forward as long as the key + is held down and backwards as long as the key - is held down.

Note! During manual operation, safety devices are disconnected.

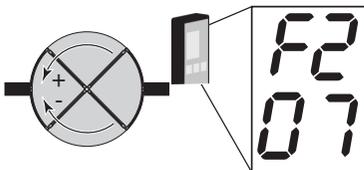

Real time operation

Programming of real time operation must be done by ASSA ABLOY Entrance Systems service technicians. Fill in form on next page.
The CDC-system has three different day schedules. Each day schedule may contain up to 10 different operating modes. The week schedule informs the system of which day schedule to run and in what order during a week. It is possible to make up to 16 exceptions from this week schedule for e.g. public holidays etc.



Activation

Type **F556** (Real time operation ON).

Prompt P3 lights up.

The door operates according to schedule.



Deactivation

Type **F557** (Real time operation OFF).

Prompt P3 extinguishes.

The door operates according to manually set operating mode.



ON/OFF switch

The OFF (0) position overrides real time operation. The door will be locked. When set to the ON (1) position, the door resumes operation according to schedule.




Manual setting of operating mode

If the door is running in real time operation and the operating mode is manually changed, real time operation is automatically deactivated. To resume real time operation type **F556**.

Summertime/Wintertime

To change from summertime to wintertime, type **F53** and select option number 02 with arrow \downarrow/\uparrow keys. Press + or - to select setting 00 or 01, (summertime off (wintertime) is value 00 and summertime on is value 01) and press S (select). To check the time change, see [Real time clock](#).

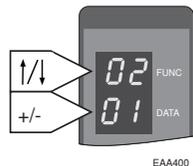

Day schedule

| Day schedule 1 | Day schedule 2 | Day schedule 3 |
|----------------|----------------|----------------|
| 1 | 1 | 1 |
| 2 | 2 | 2 |
| 3 | 3 | 3 |
| 4 | 4 | 4 |
| 5 | 5 | 5 |
| 6 | 6 | 6 |
| 7 | 7 | 7 |
| 8 | 8 | 8 |
| 9 | 9 | 9 |
| 10 | 10 | 10 |

Week schedule

| Week day | Schedule |
|-----------|----------|
| Monday | |
| Tuesday | |
| Wednesday | |
| Thursday | |
| Friday | |
| Saturday | |
| Sunday | |

Exceptions


| Start exception | End exception | Exception schedule |
|-----------------|---------------|--------------------|
| 1 | 1 | 1 |
| 2 | 2 | 2 |
| 3 | 3 | 3 |
| 4 | 4 | 4 |
| 5 | 5 | 5 |
| 6 | 6 | 6 |
| 7 | 7 | 7 |
| 8 | 8 | 8 |
| 9 | 9 | 9 |
| 10 | 10 | 10 |
| 11 | 11 | 11 |
| 12 | 12 | 12 |
| 13 | 13 | 13 |
| 14 | 14 | 14 |
| 15 | 15 | 15 |
| 16 | 16 | 16 |

Read speed settings

Type **F3**. The display shows S1.

Use **↑** or **↓** to select setpoint number to read.

Press **C** to leave the menu.

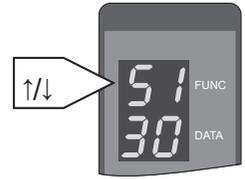

EAA254

| Setpoint | Description | Setpoint value |
|----------|-------------------------------|------------------|
| S1 | High speed setpoint | 1.0-6.0 rpm |
| S2 | Low (disabled) speed setpoint | 0.2-2.5 rpm |
| S3 | Creep speed setpoint | Fixed at 0.5 rpm |
| S4 | Continuous speed setpoint | 1.0-2.5 rpm |
| S9 | Door force parameter | 01-09 |

Real time clock

The CDC system has a real time clock built in. The clock is used for event log recording and when the door is running according to a real time operation schedule.


Read real time clock

Type **F71**. The display shows 11 and the parameter value corresponding to year.

Use **↑** or **↓** to select parameter number and display the parameter value.

Press **C** to leave the menu.

Summer and wintertime, see [Summertime/Wintertime](#) on page 13.

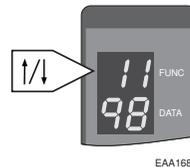

EAA168


| | |
|----|--------|
| 11 | Year |
| 12 | Month |
| 13 | Day |
| 14 | Hour |
| 15 | Minute |
| 16 | Second |

Safety

The safety systems are monitored to ensure the high safety level of the door.

The condition of the safety equipment is periodically tested. This monitoring is made during normal running conditions and it does not affect the normal day-to-day operations of the door.

Safety device on the door

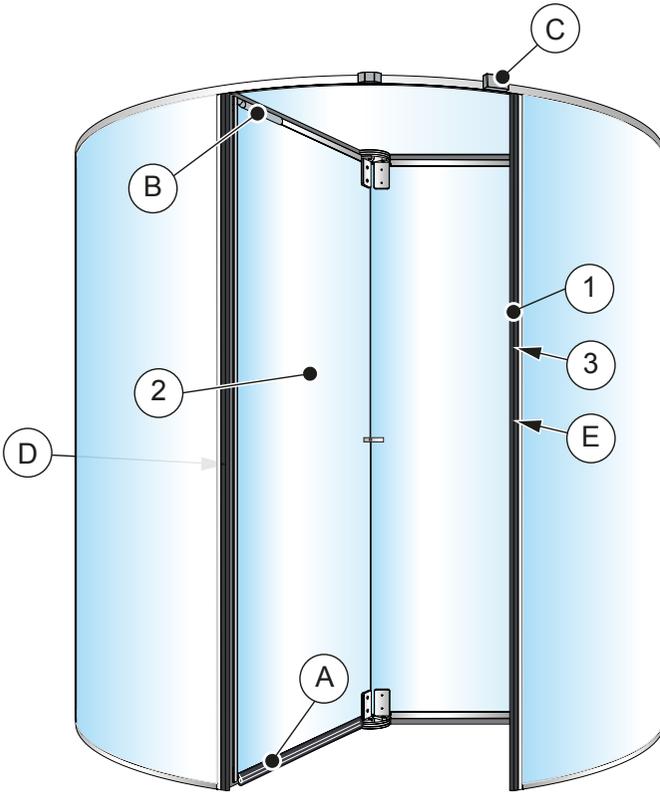

Standard


| No. | Description |
|-----|---|
| 1 | Pressure sensitive safety edges placed on the drum edges, see page 17 . |
| 2 | Force sensitive door leaves, see page 17 . |
| 3 | Emergency stop button (inside), see page 17 . |

Options

| No. | Description |
|-----|--|
| A | Pressure sensitive safety edges placed on the door leaves, see page 24 . |
| B | Infrared presence sensing system, see page 25 . |
| C | Vertical presence photocell sensor PDR, see page 25 . |
| D | Emergency stop button (outside), see page 26 . |
| E | Push button for disabled, see page 26 . |


Pressure sensitive safety edges

- Pressure sensitive safety edges on the drum edges. These stop the rotation if compressed. When the obstacle is removed, the rotation continues.

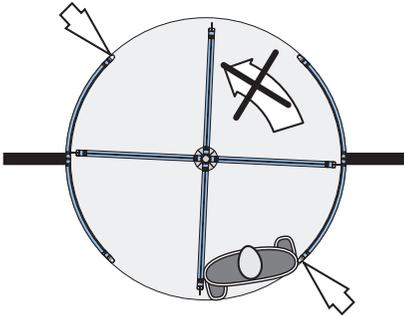


Force sensitive door leaves

- If the system detects an obstacle blocking the door, the motor is de-energized.
- The door makes three attempts to start with two seconds pause between each attempt and then waits another 30 seconds before a final attempt is made.
- If the obstacle is cleared and the door pushed forward during the waiting period, operation is resumed. When the obstacle is removed, the system can be reset by pressing C on the PCD.

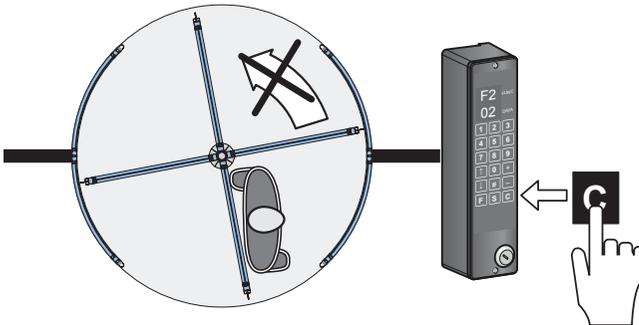

Emergency stop button (inside)

- The door rotation can be stopped by pressing the emergency stop button.
- To reset the door to normal operation - release the emergency stop button by rotating it clockwise and press C on the PCD.

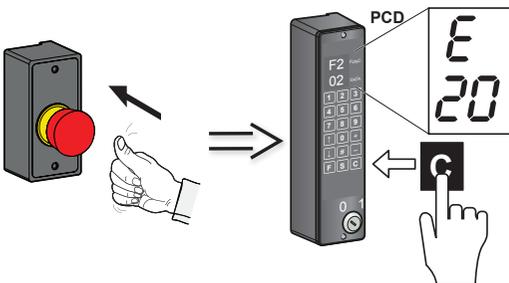


Regular safety checks

To help you fulfil the national/international requirements and to avoid malfunction and risk for injuries, we have provided the following checklist.



Do not use the equipment if repair or adjustment is necessary.
Disconnect supply when cleaning or other maintenance is to be carried out.

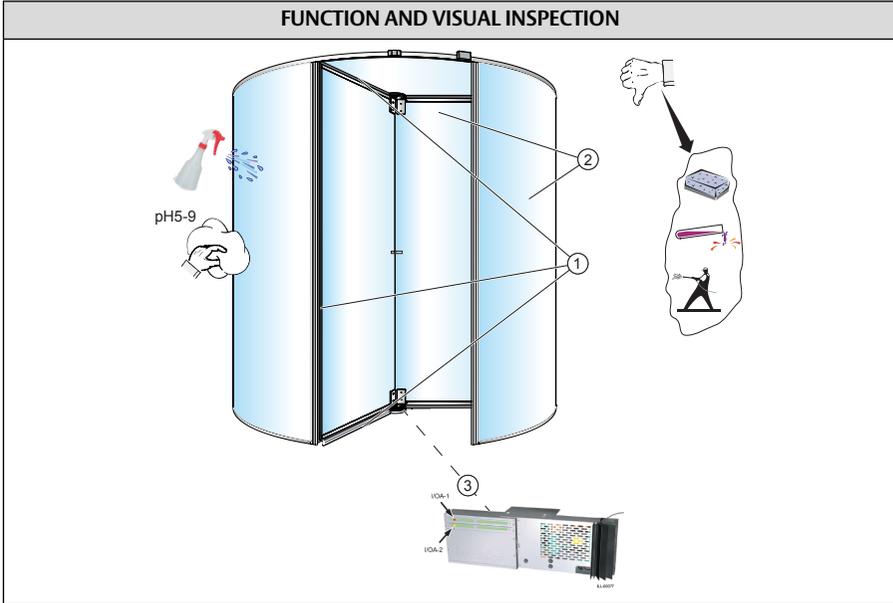

| Daily Action | | If problem occurs |
|--|---|-------------------|
| Inspect your door and check <i>visually</i> for <ul style="list-style-type: none"> condition of door seals and weather stripping ① condition of glazing rubbers and silicone ② | | ☺ |
| Check the safety sensors if any. If you are unsure of which type of sensor you have, please contact your ASSA ABLOY Entrance Systems representative. | | ☺ |
| Note! | There is a control unit ③ under the central shaft. Do not let the water flow into it. | ☺ |


☺ = Contact your ASSA ABLOY Entrance Systems service representative. For contact information, see last page.

CLEANING

The best way to remove dust and dirt from the ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 and to maintain the quality of the enamel layer, the surfaces should be cleaned three times/year (once/four months period) with gentle (pH 5-9), non-polishing detergent and water. Use a soft non-abrasive sponge. The cleaning should be documented. To avoid damages to the profiles the brushes must be vacuum-cleaned weekly.

- Do not expose windows, doors or profiles to alkalis. Both aluminium and glass are sensitive to alkalis.
- Do not clean with high-pressure water. Operator, programme selector and sensor may be damaged and water may enter the profiles.
- Do not use detergents or abrasive additives.
- Do not scrub with materials like Scotch-brite, as this will cause mechanical damage.

SIGNAGE

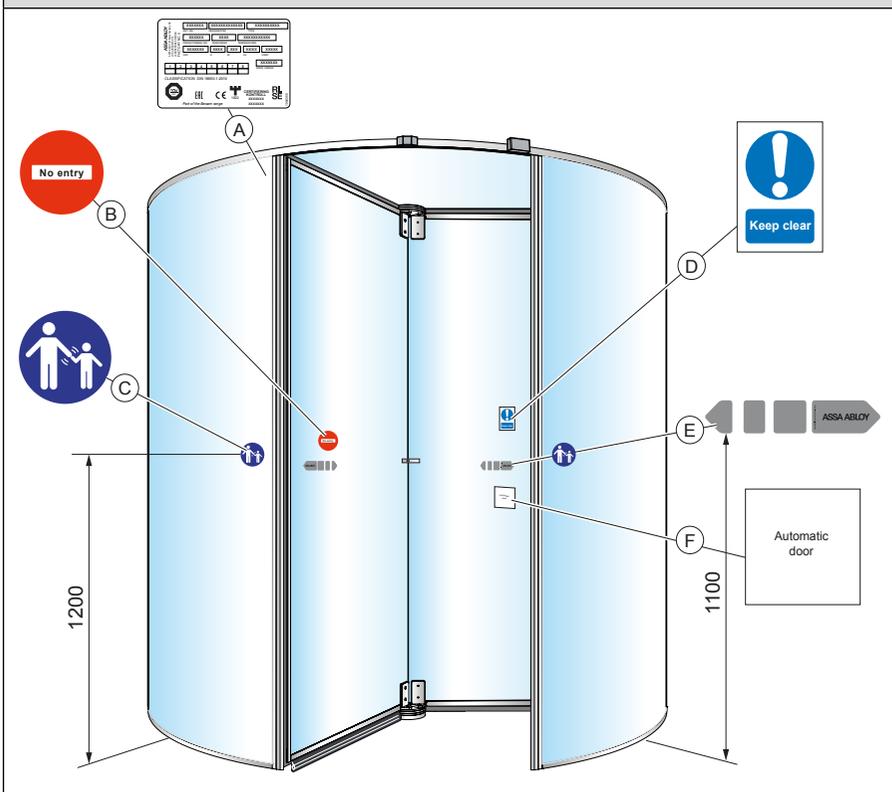

| Action | If problem occurs |
|--|--|
| Check that all required signage is applied and intact. Mandatory indicates that the signage is required by European directives and equivalent national legislation outside the European Union. |  |
| (A) Product label: Mandatory | |
| (B) No entry, identifying one-way traffic: Mandatory in GB and US, if applicable, not included in the product. | |
| (C) Supervision of child (applied to both sides of the door): Mandatory according to national regulations. Recommended, if the risk analysis shows use by children. | |
| (D) Keep clear | |
| (E) ASSA ABLOY Entrance Systems door sticker: Mandatory, if applicable to highlight the presence of the glass (applied to all glass sections that are moving). | |
| (F) Automatic door | |

 = Contact your ASSA ABLOY Entrance Systems service representative. For contact information, see last page.

Troubleshooting

| What's wrong? | Remedies |
|---|---|
| The motor does not start | Make sure that the PCD display shows "ON", and that mains power to the door is on. |
| | Check the operating mode, see The ON/OFF switch on page 11 . |
| | Check the mains switch and fuse in the building. |
| | Check that there are no objects in the safety detection zone. |
| | See Emergency stop button (inside) on page 17 for start up procedure. |
| The motor starts but door will not rotate | Check that nothing is jammed beneath the door. |
| | Unlock the mechanical locks. |
| The door does not close | Change the setting of the PCD, see Settings and operation PCD on page 9 . |
| | Check that there are no objects in the safety detection zone. |
| | Check that nothing is jammed beneath the door. |
| If the problem continues, please contact your ASSA ABLOY Entrance Systems representative. | |

Supervision system

The ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 have a built-in supervision system.

If an error occurs, the PCD display will show an error or status code. During normal operation the display will show "ON".

To reset the door to normal operation after an error code, press **C** on the PCD. See code list below.

Code List

| Code | Status | Cause | Remedy |
|------|---|---|--|
| ON | The revolving door is functioning normally | | |
| 10 | Stop | Safety edge activated | Check for obstacles between the wing and the floor and between the wing and the inside of the drum. Check safety edges. |
| 11 | Electromechanical lock error | No signal from the electromechanical lock | Make one more unlock/lock operation. If that does not help call ASSA ABLOY Entrance Systems Service. |
| 20 | Emergency stop | Emergency stop button pressed down | Release the button by turning it in the direction of the arrows, then restore function by pressing C on the PCD. |
| 21 | Response from the PDR sensor fitted above the opening on the inside | Inner PDR sensor activated | Remove obstacle in the inner detection zone |
| 22 | Response from the PDR sensor fitted above the opening on the outside | Outer PDR sensor activated | Remove obstacle in the outer detection zone. |
| 25 | Response from the touchless door leaf sensors (the door rotates slowly) | The detection zone of the touchless door leaf sensors activated | Remove obstacle in the detection zone. |
| 26 | Response from the touchless door leaf sensors (the door stops) | The detection zone of the touchless door leaf sensors activated | Remove obstacle in the detection zone. |
| 30 | Blocked door | The wing is blocked by an obstacle | Check for obstacles between the wing and the floor and between the wing and the inside of the drum. After checking, press C on the PCD. |
| 32 | Power fail input | Mains power lost | Check mains fuse. Check external power supply. |



= For all other status codes, contact your ASSA ABLOY Entrance Systems service representative.
For contact information, see last page.

Service/Maintenance

Service and adjustments performed by your ASSA ABLOY Entrance Systems-authorized representative will ensure safe and proper operation of your automatic door unit.

Remember to keep “Service Log Book” and “Site Acceptance Test and Risk Assessment” documents (PRA-0003) available. These are used together.

The table below shows the recommended interval in revolutions, when to replace parts during preventive maintenance. Talk to your ASSA ABLOY Entrance Systems representative to learn more about our service offering.

Minimum maintenance interval of once a year. See EN16005.


| Part | Revolutions | Action |
|-----------------------|---------------------|---------------|
| Motor | 300.000/1.500.000 | Check/Replace |
| Safety devices | 300.000 | Check |
| Impulse devices | 300.000 | Check |
| Gear box | 3.000.000 | Check |
| Drive belt | 300.000/600.000 | Check/Replace |
| Emergency stop button | minimum once a year | Check |

Check all parts to be replaced if necessary.

Service request

After 300.000 revolutions the prompt P2 indicates that it is time for service.

Minimum maintenance interval of once a year. See EN16005.

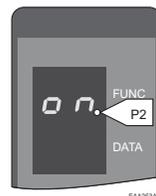


Options

Even though the ASSA ABLOY RD300-3 and ASSA ABLOY RD300-4 are installed to comply with all applicable safety regulations, it is possible to enhance safety/comfort with the following add-ons (please contact your local ASSA ABLOY Entrance Systems company for detailed description).


Pressure sensitive safety edges placed on the door leaves

If one of the safety edges, mounted on the door leaves, is compressed, the door stops. When the obstacle is removed, the rotation starts.

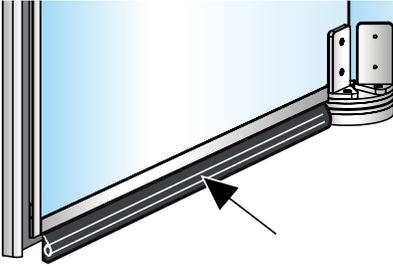


Infrared presence sensing system

Installed on the top of the door leaves-provides safety over the whole height of the door. If the sensor detects an obstacle the door stops or reduces speed to 0.5 rpm (configurable). When the obstacle is removed, the rotation starts.

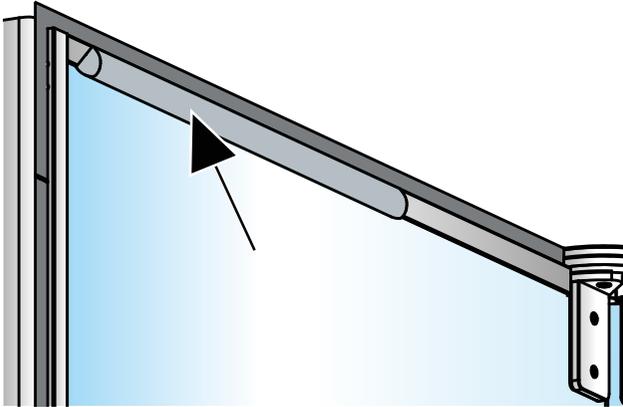


Laser presence sensing system

Installed on the top of the door leaves-provides safety over the whole height of the door. If the sensor detects an obstacle the door stops or reduces speed to 0.5 rpm (configurable). When the obstacle is removed, the rotation starts.

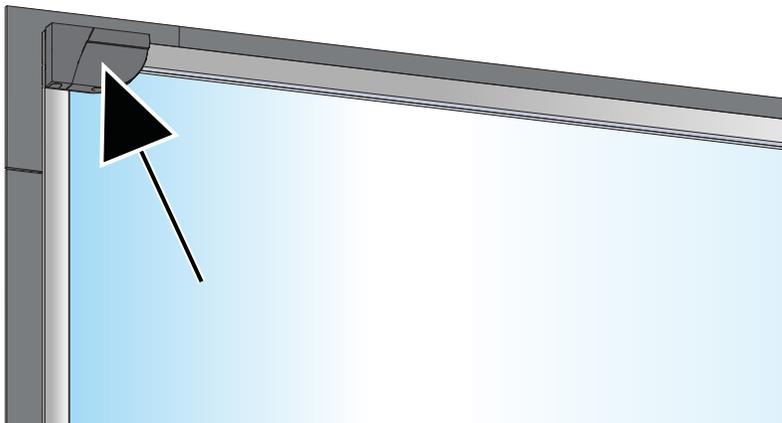


Vertical presence photocell sensor PDR

Vertical presence photocell sensor PDR located above the entrance on inner and outer sides. If the beam is broken in the safety zone (approx. 25° from the drum edge) the door stops. When the obstacle is removed the rotation starts.

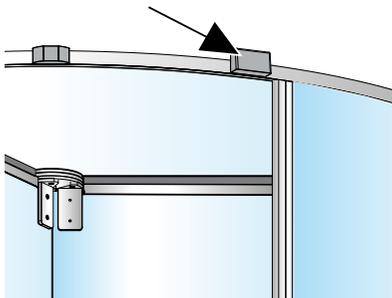


Concealed sensor box

With NCD

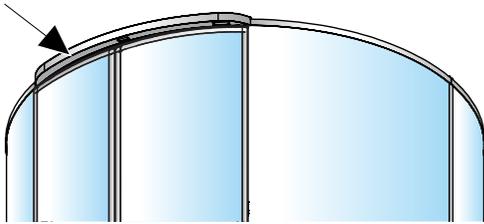


Without NCD

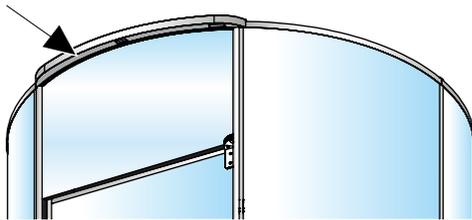

Emergency stop button (outside)

In case of an emergency, door rotation can be stopped by pressing the emergency stop button.

To reset the door to normal operation - release the emergency stop button by rotating it clockwise and press C on the PCD.

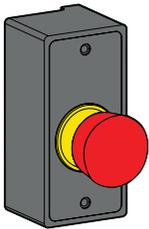


Push button for disabled

Push button to reduce speed of the door.



Control post

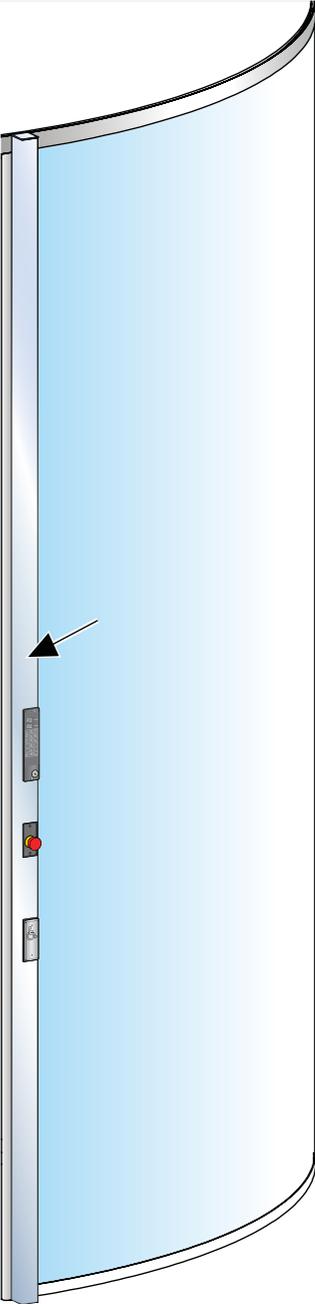


Mechanical lock

Lock the door leaf:

- Turn the ON/OFF switch to OFF.
- Use the key to lock the door leaf.


Unlock the door leaf:

- Use the key to unlock the door leaf.
- Lift the lock pin.
- Turn the ON/OFF switch to ON.

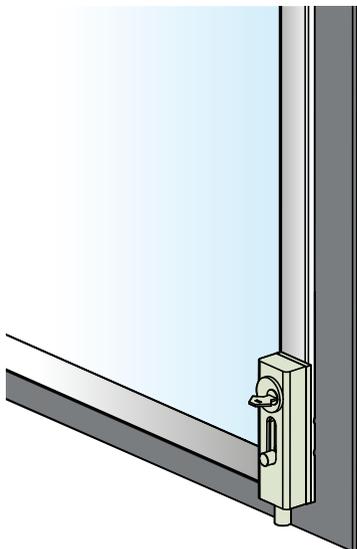


Center plate

Center plate could be put on the finished floor.

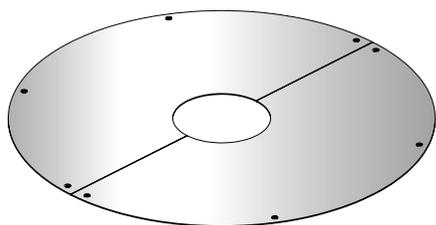


Rain water protection cover opening

With NCD

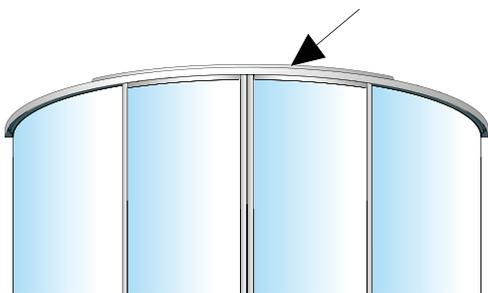


Without NCD

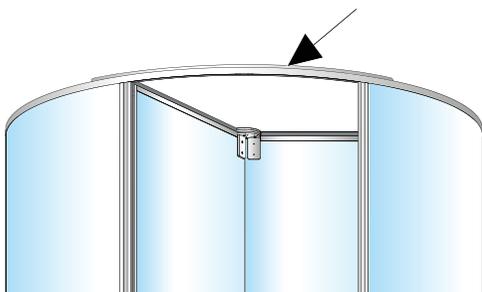

Accessories


Rotation brake (lock)

Automatic activation (configurable) of the rotation brake in the standby position, prevents door rotation (e.g. from being manually pushed or by strong wind) when there is no signal from the activation units. The brake can also be activated with a key switch or push button for immediate stop of the door.

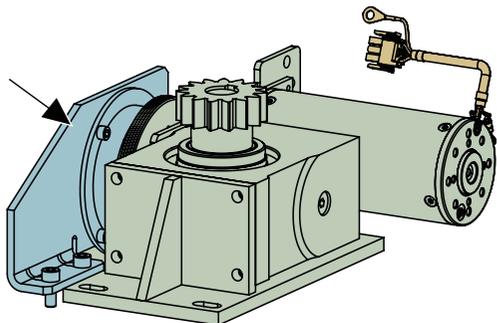


Electromechanical lock

The electromechanical lock, locks the door in home position.







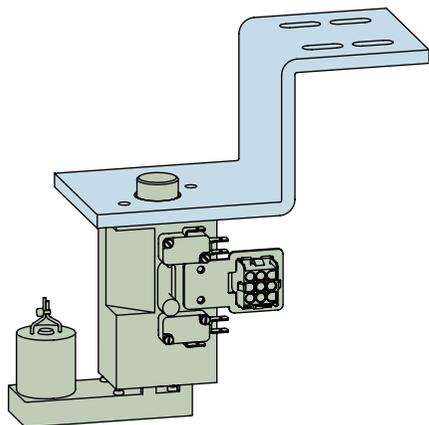


Night closing door (NCD)

Manually operated

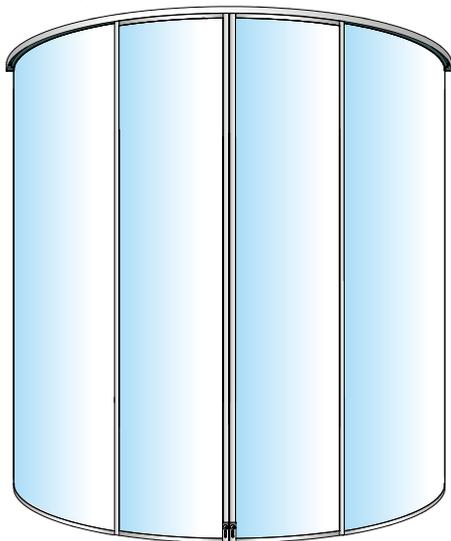

Quick guide changing operating mode

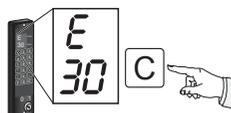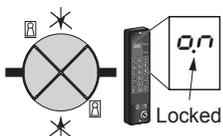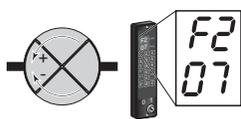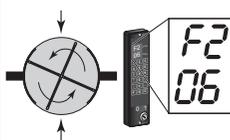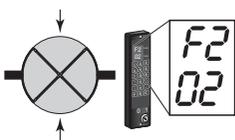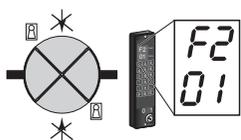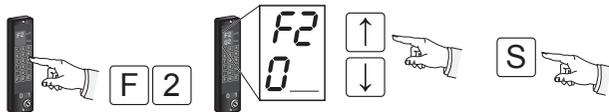

Other products from ASSA ABLOY Entrance Systems

- Door Systems
- Balance doors
- Air curtains
- Sliding doors
- Swing doors
- Automatic and manual activation units
- Overhead sectional doors
- Service such as preventive maintenance and upgrade programs, emergency repairs, service advice and door management
- Vertical lifting fabric doors
- Dock levelers
- Dock shelters
- Folding doors
- High speed doors
- Loadhouses

Declaration of conformity

ASSA ABLOY
Entrance Systems

Experience a safer
and more open world

We **ASSA ABLOY Entrance Systems AB**
Lodjurgatan 10
SE-261 44 Landskrona
Sweden

declare under our sole responsibility that the type of equipment:
RD300-3, RD300-4

complies with the following directives:

2014/30/EU ElectroMagnetic Compatibility Directive (EMCD)

2006/42/EC Machinery Directive (MD)

2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment with the applicable amendments (RoHS)

Harmonized European standards which have been applied:

EN ISO 13849-1:2015

EN 60335-1:2012+A13:2017

EN 60335-2-103:2015

EN 61000-6-2:2005

EN 61000-6-3:2007+A1:2011

EN 16005:2012/AC:2015

Other standards or technical specifications, which have been applied:

IEC 60335-1 ed. 5:2010

IEC 60335-2-103 ed. 2.1:2011

Certificate issued by a notified or competent body (for full address, please contact ASSA ABLOY Entrance Systems AB) concerning the equipment:

BY/112 02.01 020 07600

B 058029 0042

The manufacturing process ensures the compliance of the equipment with the technical file. The manufacturing process is regularly assessed by 3rd party.

The CE mark was first applied 2014-12-21.

Compilation of technical file:

Anders Forslind

ASSA ABLOY Entrance Systems AB

Lodjurgatan 10

SE-261 44 Landskrona

Sweden

Place
Landskrona

Date
2020-10-08

Signature
Klas Hagelin

Position
Global Quality Manager



DoC 1013749-en-6.0

ASSA ABLOY Entrance Systems is a leading supplier of entrance automation solutions for efficient flow of goods and people. Building on the long-term success of the Besam, Crawford, Albany and Megadoor brands, we offer our solutions under the ASSA ABLOY brand. Our products and services are dedicated to satisfying end-user needs for safe, secure, convenient and sustainable operations. ASSA ABLOY Entrance Systems is a division within ASSA ABLOY.

assaabloyentrance.com



ASSA ABLOY Entrance Systems

Tel: +46 10 47 47 000
info.aes@assaabloy.com
assaabloyentrance.com